



ORDERING & MEASURING GUIDE

Place your order by either [filling out our online order form](#) or by emailing us your measurements & photo to nubathinc@gmail.com.

Measure only the flat part of the floor of the unit - not the radius!

If there is a built-in anti slip, you can use this as a measuring guide.

All orders need to include MEASUREMENTS & JOB NAME and should include a PHOTO of the unit.

Be sure to double-check your measurements! We will design exactly what you send us.

All custom inlay orders are final - no refunds or exchanges.


BATHTUB INLAYS

CHOOSE 1 OF THE FOLLOWING OPTIONS:

NO DRAIN-WRAP

-OR-

WITH DRAIN WRAP

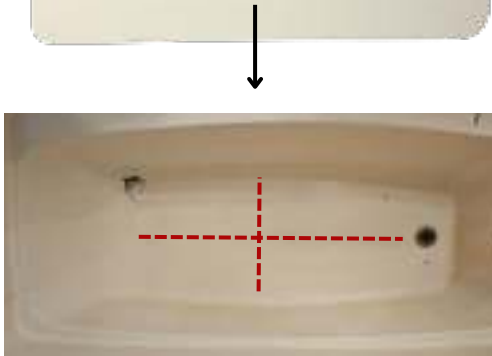



MEASURE LENGTH AND WIDTH
BEHIND THE DRAIN

-OR-

SKIP THE MEASURING AND
ORDER ONE OF OUR STOCK SIZES:

REGULAR STOCK: 36" X 15.5"

MINI STOCK: 34.5" X 14.5"

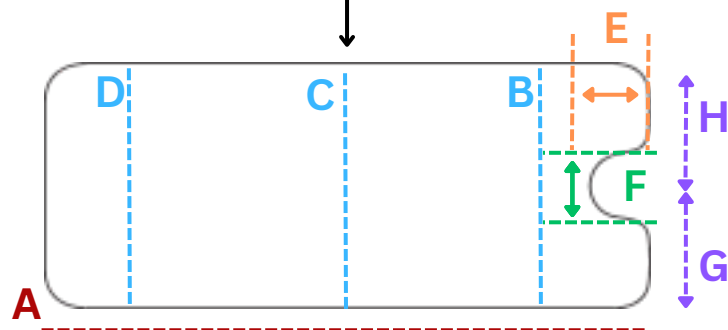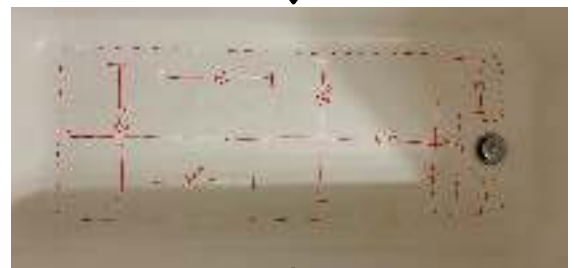

A: Overall length of tub

B, C, D: Width at front, mid, back of tub

E: Depth of drain wrap

F: Width of drain wrap

G & H: Drain location. Is it center or offset?
Make measurements to center of drain




DRAIN WRAP INSTALL

NON-WRAP INSTALL W/REGLAZE





SHOWER INLAYS

USE THE FOLLOWING MEASURING GUIDE:

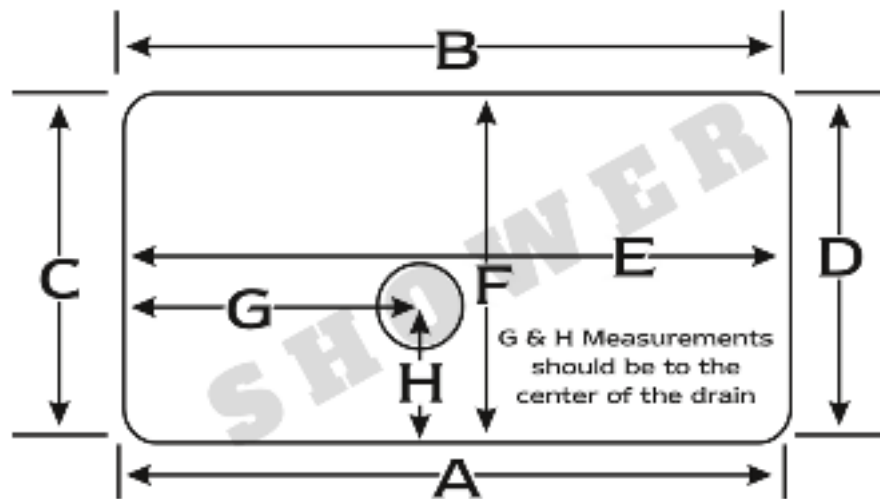

Note: E&F Measurements only needed if curve in unit walls are present

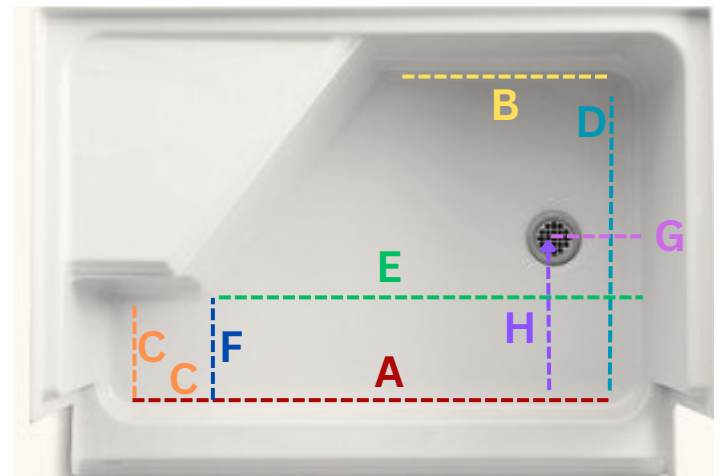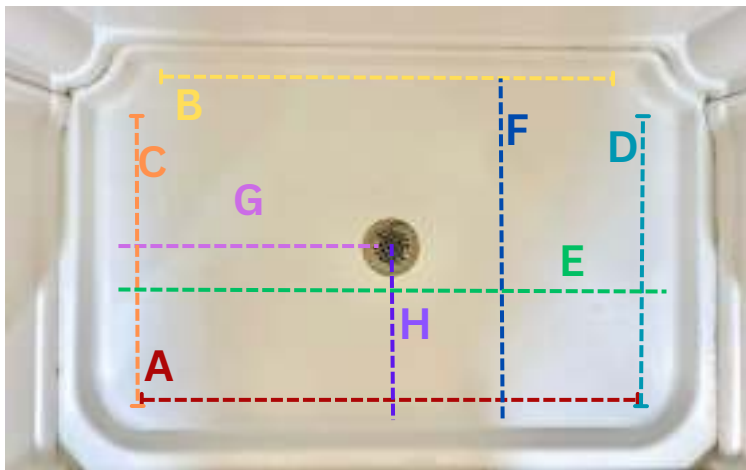

SHOWER INLAYS ARE TYPICALLY MANUFACTURED WITH A 5.5" DRAIN CUTOUT, UNLESS OTHERWISE SPECIFIED.








COMPLETED SHOWER INSTALLATION

SCROLL DOWN TO SEE MORE MEASUREMENT SAMPLES



MEASURING SAMPLES

EMAIL US YOUR PHOTO LIKE THESE WITH THE COLOR AND JOB NAME FOR EASY ORDERING

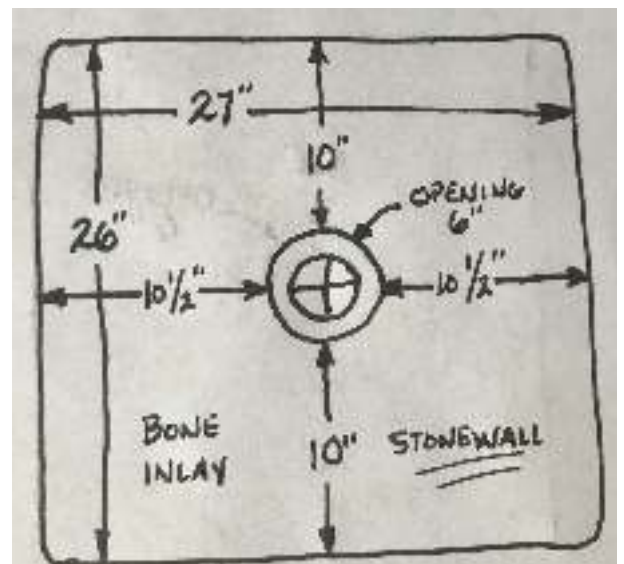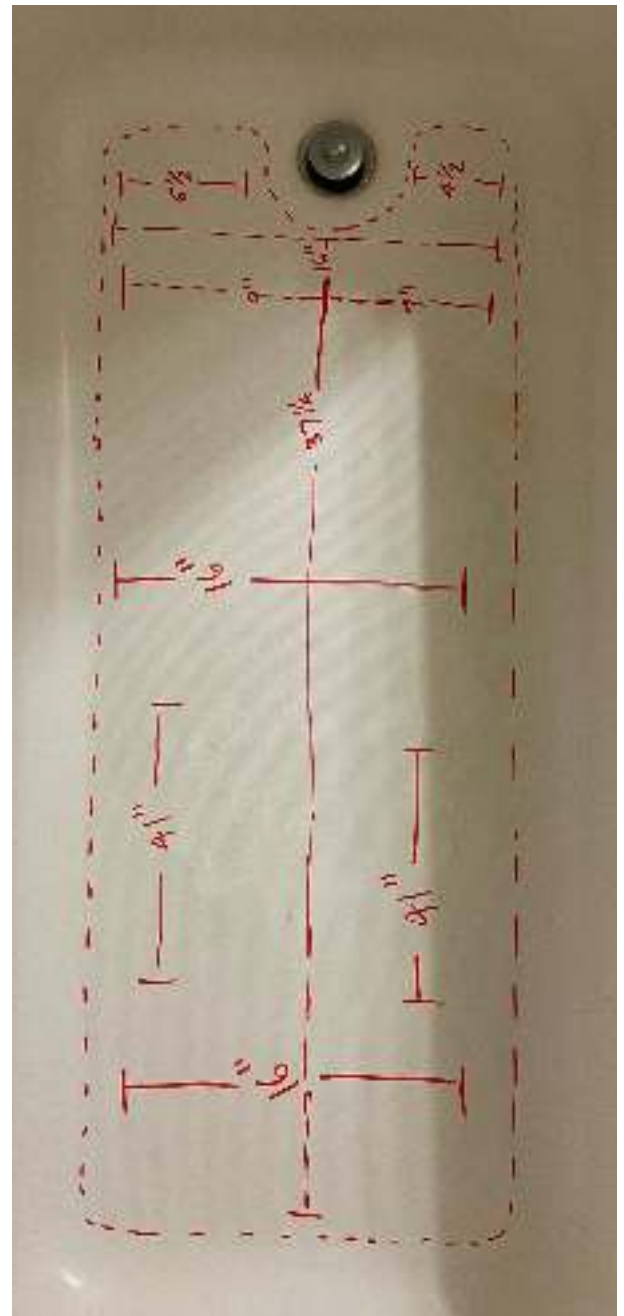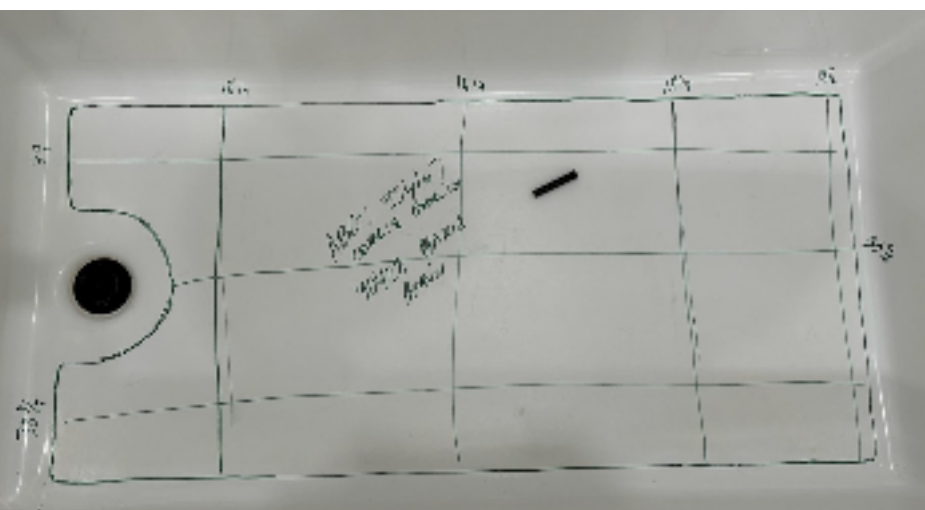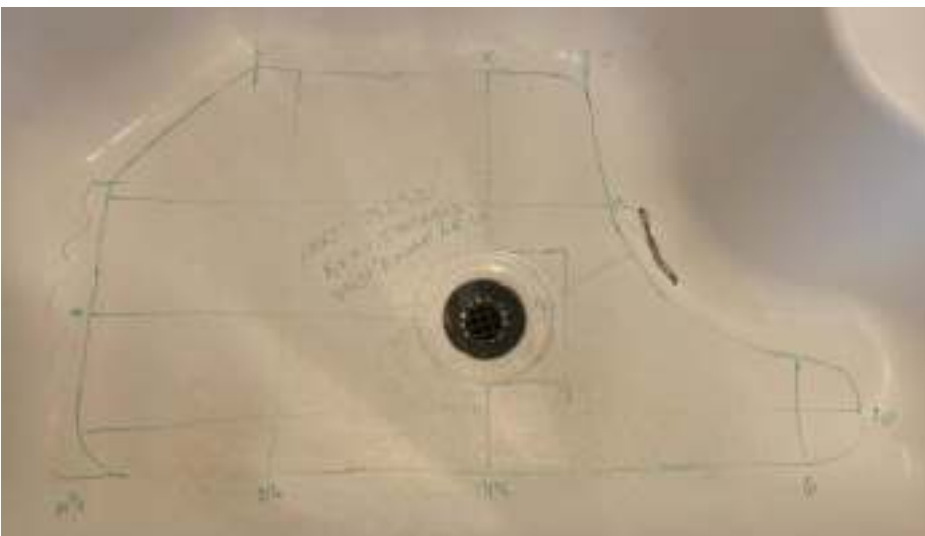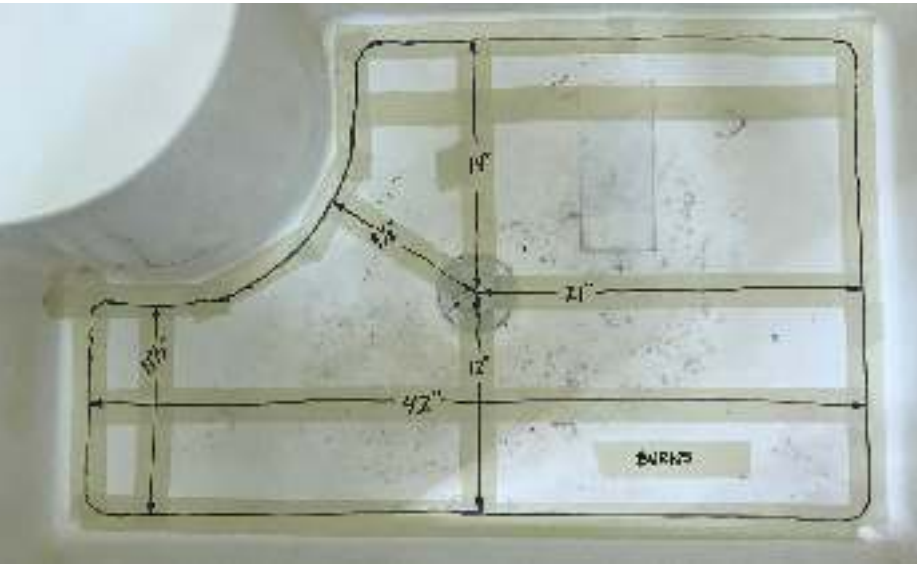

YOU CAN ALSO DRAW A DIAGRAM ON PAPER IF YOU PREFER THIS METHOD



