



NU-LIFE BATH & SHOWER INLAY KIT

INSTALLATION INSTRUCTIONS

NU-BATH INC.

772-934-6618 | support@nubath.com | www.nubath.com

TOOLS NEEDED (NOT SUPPLIED)

Nu-Life J-Roller*
2-inch Masking Tape
Sander with 60 grit sandpaper hand sandpaper

Paper towels
Denatured Alcohol, Acetone or Lacquer Thinner
Razor knife

*available for purchase through Nu-Bath Inc.

RELEASE TAPE ON INLAY CAREFULLY AND LAY FLAT PRIOR TO JOB
IMPORTANT: WORK AREA NEEDS TO BE WELL VENTILATED. WEAR CHARCOAL RESPIRATOR.
CAUTION: AVOID CONTACT OF ADHESIVE WITH EYES.

1. Clean tub or shower bottom and up 6" on sides.

Fig.1.1



Fig.1.2



2. Position the inlay in bottom of tub/shower and adjust to its final location.


Fig.2.1



Note: Image has been enhanced to accurately represent this step in the inlay installation process.

3. Place a row of masking tape around the entire inlay perimeter, leaving about 1/2 inch of the tub bottom exposed between tape and inlay.

Fig.3.1

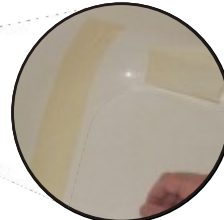

Note space between inlay and the first line of tape. This is for positioning of the inlay in the bottom of the tub.

4. Remove the inlay and place a second row of tape inside and overlapping the first.

Fig.4.1



5. Fold some tape over itself to make double sided tape, and place 2 or 3 tape rolls on the bottom of the inlay and place the inlay back into the tub.

Fig.5.1




Fig.5.2



Fig.5.3



6. Hold the inlay to prevent it from moving and use the knife to cut through the tape right along the edge of the inlay around the entire perimeter.

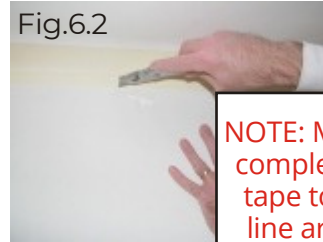

NOTE: Make sure you cut completely through the tape to ensure a clean line around the inlay.

7. Remove the inlay, the tape from the bottom of the inlay, and the tape from the inside of the cut perimeter (under where the inlay was).




8. Drill out ends of crack and grind any cracked or foamed areas flat before proceeding.

NOTE: You can core larger holes where crack is, to fill and add support, if needed.




NOTE: Although additional support is rarely needed, sometimes it's necessary to ensure proper adhesion of glue to the bottom of tub. Many methods of support are available. For help, call 772-934-6618 and a technician can discuss the best method for you.

9. Sand bottom of tub (stay inside the tape); sanding all gloss, silicone, or debris from inside work area.

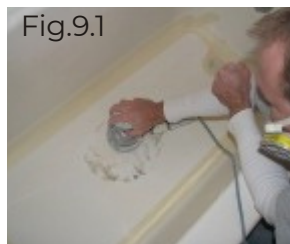

10. Vacuum all debris from sanding and wash bottom of tub or shower with solvent .

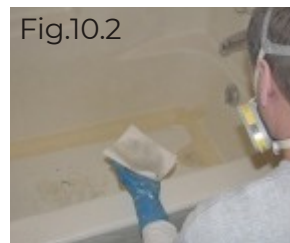

11. Put on supplied gloves and mix together parts A and B of adhesive (1:1 ratio) into supplied container. Mix thoroughly. (Appx. 1 minute) YOU HAVE A MAXIMUM OF 30 MINUTES TO WORK WITH ADHESIVE ONCE IT IS MIXED!



12. Pour out mixed adhesive on bottom of tub and (using supplied spreader) spread evenly across working area of unit (approx. 1/8 inch).



13. Adhesive may be used to float any valleys you have in the tub or shower bottom.

NOTE: If floating valleys over 1/4 deep, call for additional instructions: 772-934-6618




14. Holding at both ends, place center of inlay down in tub (then ends) and adjust to permanent location.





15. Using J-roller, roll unit from center in a pie shape around inlay:


NOTE: Be careful around edges of inlay not to pick up adhesive on the roller.

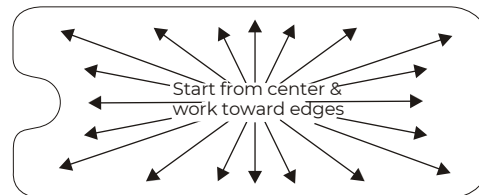

You should have a solid bead of adhesive around the edge of the inlay

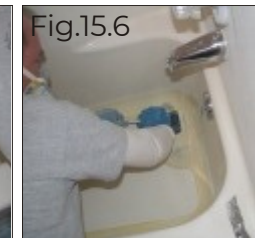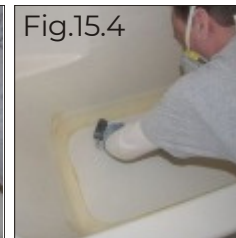


16. Push excess adhesive bead away from inlay onto tape using a clean edge of the spreader provided or other flat-edged product.

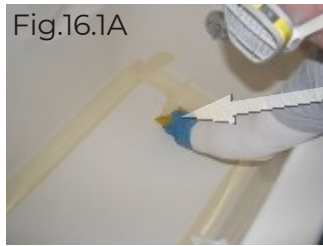

NOTE: To remove a larger amount of excess glue you may use a squeegee or spreader if you have one available.

17. Roll inlay surface again, now moving across the length and width of the unit.

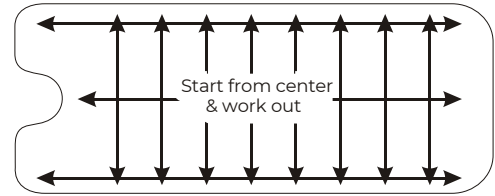

18. Carefully Remove the masking tape and discard..


Remove excess adhesive with dry paper towels, then solvent paper towels.

REMOVE ALL EXCESS ADHESIVE FROM INLAY AND TUB SURFACE. ADHESIVE CAN ETCH TUB OR TOP OF INLAY IF LEFT ON TOO LONG!



NOTE: When discarding adhesive, use extra caution. Adhesive can melt through trash bags and cause damage to bath floor or other appliances. Use bucket provided and/or shipping box for discarding waste.

19. Roll entire edge of inlay.

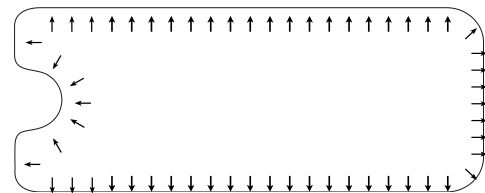

20. Do a final wash of unit to remove any remaining adhesive.

CAUTION: DO NOT OVERSATURATE PAPER TOWEL AS THIS WILL CAUSE SOLVENT TO POOL UNDER INLAY.



Congrats!
You just installed your first Nu-Life Inlay

TO ORDER:

Email: nubathinc@gmail.com

Phone: 772-934-6618

or download our "Nu-Bath" app on the App Store!

