



# ORDERING & MEASURING GUIDE

Place your order by either [filling out our online order form](#) or by emailing us your measurements & photo to [nubathinc@gmail.com](mailto:nubathinc@gmail.com).

**Measure only the flat part of the floor of the unit - not the radius!**

If there is a built-in anti slip, you can use this as a measuring guide.

**All orders need to include MEASUREMENTS & JOB NAME and should include a PHOTO of the unit.**

Be sure to double-check your measurements! We will design exactly what you send us.

All custom inlay orders are final - no refunds or exchanges.


## BATHTUB INLAYS

CHOOSE 1 OF THE FOLLOWING OPTIONS:

NO DRAIN-WRAP

-OR-

WITH DRAIN WRAP

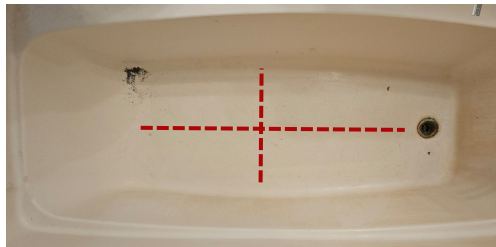



MEASURE LENGTH AND WIDTH BEHIND THE DRAIN

-OR-

SKIP THE MEASURING AND ORDER ONE OF OUR STOCK SIZES:

**REGULAR STOCK: 36" X 15.5"**

**MINI STOCK: 34.5" X 14.5"**

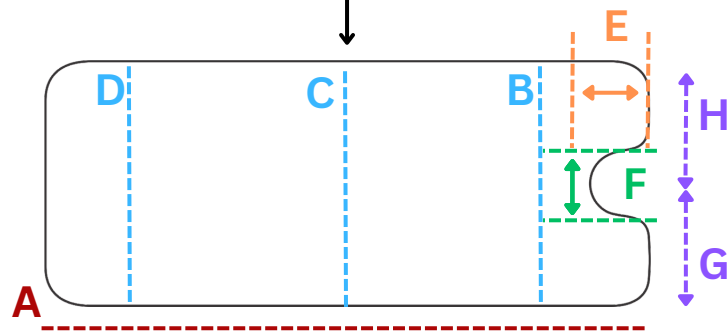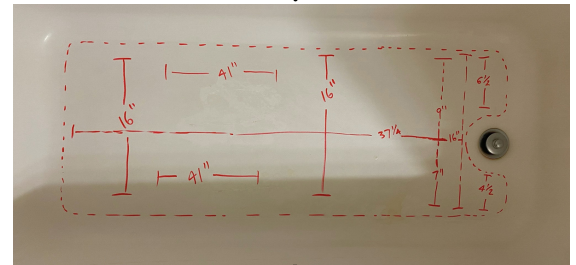

A: Overall length of tub

B, C, D: Width at front, mid, back of tub

E: Depth of drain wrap

F: Width of drain wrap

G & H: Drain location. Is it center or offset?  
Make measurements to center of drain




DRAIN WRAP INSTALL





NON-WRAP INSTALL W/REGLAZE

# SHOWER INLAYS

USE THE FOLLOWING MEASURING GUIDE:

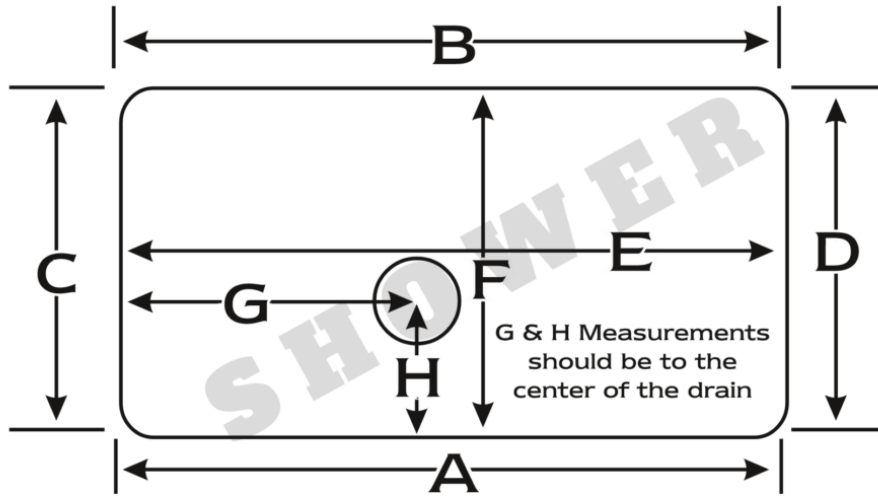

Note: E&F Measurements only needed if curve in unit walls are present

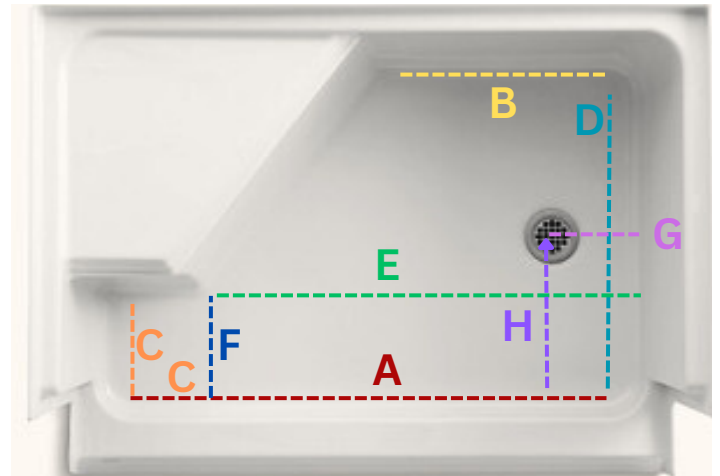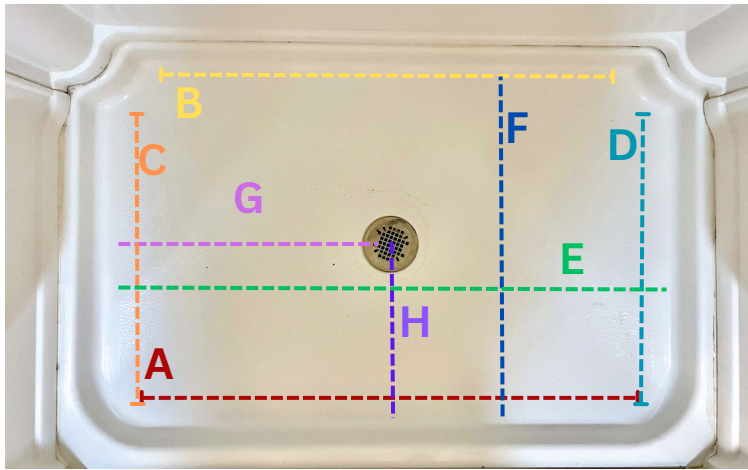

**SHOWER INLAYS ARE TYPICALLY MANUFACTURED WITH A 5.5" DRAIN CUTOUT, UNLESS OTHERWISE SPECIFIED.**








COMPLETED SHOWER INSTALLATION

**SCROLL DOWN TO SEE MORE MEASUREMENT SAMPLES**



# MEASURING SAMPLES

EMAIL US YOUR PHOTO LIKE THESE WITH THE COLOR AND JOB NAME FOR EASY ORDERING

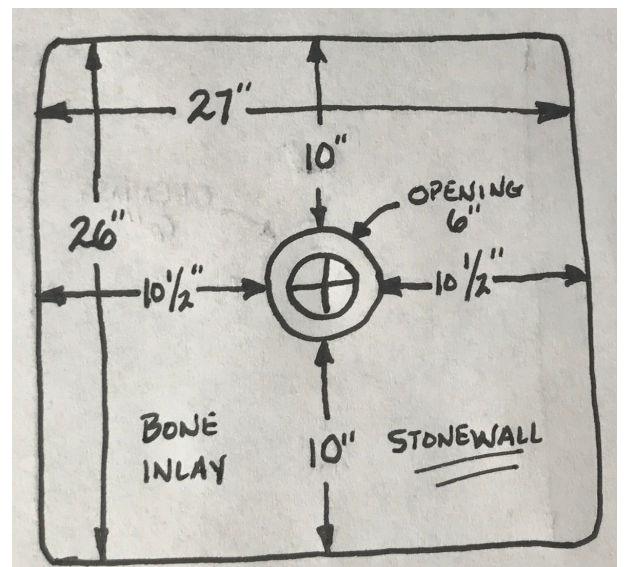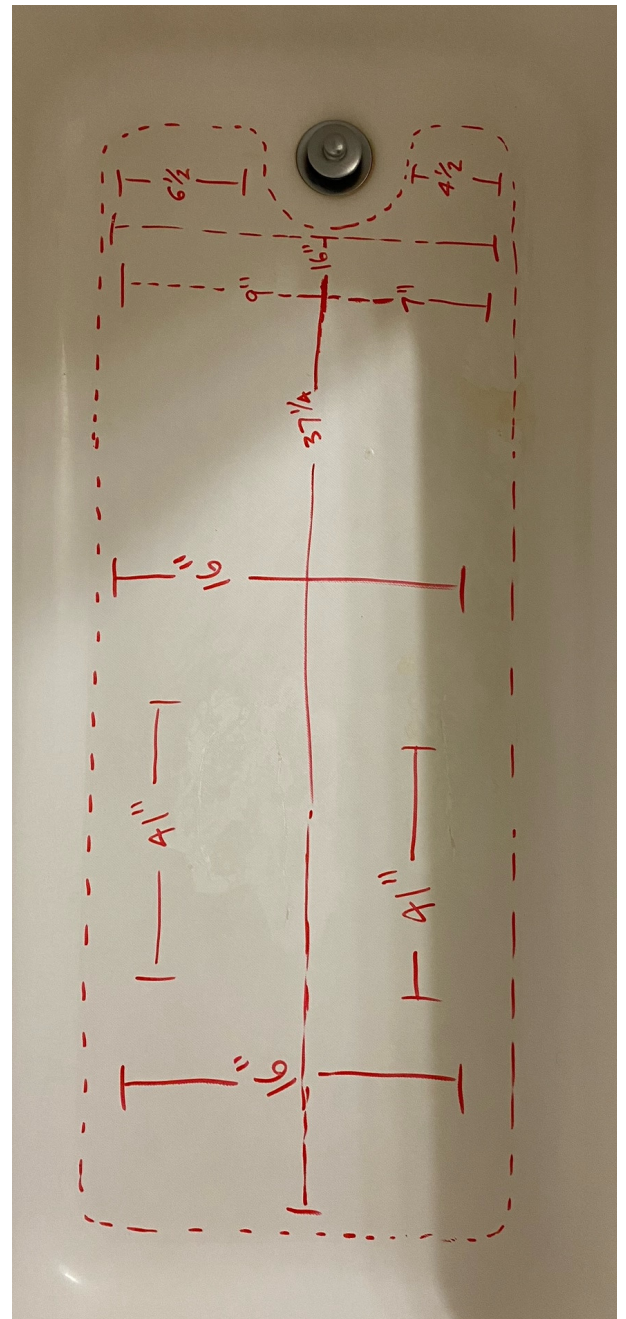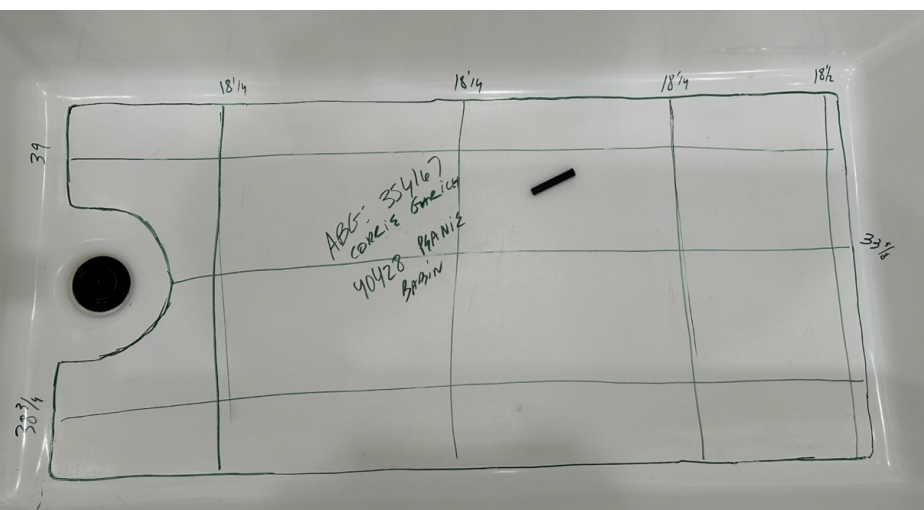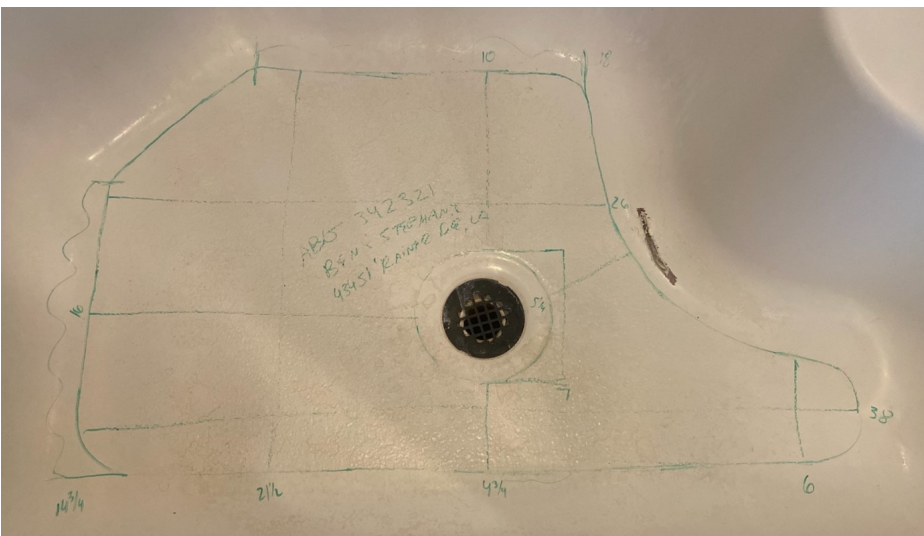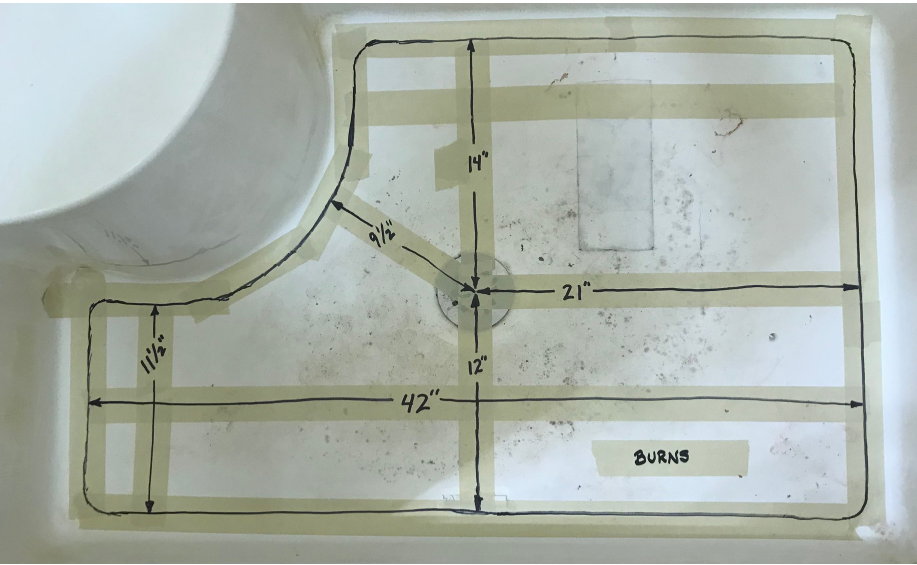

YOU CAN ALSO DRAW A DIAGRAM ON PAPER IF YOU PREFER THIS METHOD



